

Manual

Micflip

Works with Apple Find My
Works with Android Find Hub

Card eject button
Power On/Long press the button for 5 seconds until the device emits a confirmation tone.
Power Off: Click the button 5 times consecutively until the device emits a confirmation tone.
Factory Reset: Click the button 4 times consecutively (the device will emit a tone), then long press until the device emits a tone again.
Bind device to a new app account
Confirm Status: Double-click the button. When the device beeps, it is powered on.

Micflip Wallet
This Micflip Wallet is a smart app wallet supporting dual tracking channels: Apple Find My and Google Find Hub. It fits inside handbags, laptop bags and other daily carry items, enabling you to monitor your belongings location anytime, anywhere.

Manual

Micflip

Works with Apple Find My
Works with Android Find Hub

Botón de expulsión de tarjeta
Encendido: Mantenga presionado el botón durante 5 segundos hasta que el dispositivo emita un tono de confirmación.
Apagado: Presione el botón 5 veces consecutivas hasta que el dispositivo emita un tono de confirmación.
Restablecimiento de fábrica: Presione el botón 4 veces consecutivas (el dispositivo emitirá un tono), luego mantenga presionado hasta que el dispositivo emita un tono nuevamente.
Asociar el dispositivo a una nueva cuenta de la aplicación
Confirmar el estado: Haga clic en el botón. Cuando el dispositivo emita un pitido, significa que se ha encendido.

Micflip Wallet
Este billetera inteligente antirrobo Micflip es compatible con los dos sistemas Apple Find My y Google Find Hub. Se puede guardar en bolsos de mano, maletines para portátil y otros artículos personales para consultar la ubicación de sus pertenencias en cualquier momento y lugar.

Handbuch

Micflip

Works with Apple Find My
Works with Android Find Hub

Kartenauswurf-Taste
Einschalten: Drücken Sie die Taste 5 Sekunden lang fest, bis das Gerät einen Bestätigungstong abgibt.
Aussschalten: Drücken Sie die Taste fünfmal hintereinander, bis das Gerät einen Bestätigungstong abgibt.
Werkseinstellungen zurücksetzen: Drücken Sie die Taste viermal hintereinander (das Gerät gibt einen Ton ab), halten Sie sie dann gedrückt, bis das Gerät erneut einen Ton abgibt.
Gerät an neues App-Konto binden
Zustand bestätigen: Doppelklicken Sie auf die Taste. Wenn das Gerät piept, ist es eingeschaltet.

Micflip Wallet
Die intelligente Verlorenheits-Geldbörse Micflip unterstützt zwei Kanäle: Apple Find My sowie Google Find Hub. Sie passt in Handtaschen, Laptoptaschen und weitere Minihandtaschen, damit Sie jederzeit und überall den Standort Ihrer Gegenstände abfragen können.

Manuel

Micflip

Works with Apple Find My
Works with Android Find Hub

Bouton d'éjection de carte
 Mise en marche : Maintenez le bouton enfoncé pendant 5 secondes jusqu'à ce que l'appareil émette un bip de confirmation.
 Arrêt : Appuyez 5 fois consécutivement sur le bouton jusqu'à ce que l'appareil émette un bip de confirmation.
 Réinitialisation usine : Appuyez 4 fois consécutivement sur le bouton (l'appareil émettra un bip), puis maintenez-le enfoncé jusqu'à ce que l'appareil émette un nouveau bip.
 Associer le dispositif à une nouvelle application : Cliquez sur le bouton. Lorsque l'appareil émet un bip, il est en marche.

Micflip Wallet
Le portefeuille intelligent antivol Micflip fonctionne sur les deux réseaux Apple Find My et Google Find Hub. Se glisse dans sacs à main, sacs d'ordinateur portable et accessoires de quotidien pour localiser vos biens à tout moment, où que vous soyez.

说明书

Micflip

Works with Apple Find My
Works with Android Find Hub

读卡按键
开机: 长按5秒直至发出提示音
关机: 连接5下直至发出提示音
恢复出厂设置: 连接4下发出声响再连续长按直至再次发出提示音。
物品重新绑定到新的App帐户
请先将设备从当前App上移除, 再将设备恢复出厂设置后重新进行配对绑定。
状态确认: 连续按开关两次, 设备发出声响即表示产品在开机状态。

Micflip Wallet
这款智能防丢钱包, 支持苹果Find My与安卓Find Hub双通道, 适合放在手提包、电脑包等随身物品中, 帮助您随时定位重要物品位置。

Kılavuz

Micflip

Works with Apple Find My
Works with Android Find Hub

Kart açma tuşu
 Açma : Çizah onay sesi çıkıncaya kadar tuşu 5 saniye boyunca basılı tutun.
 Kapatma : Çizah onay sesi çıkıncaya kadar tuşu ard arda 4 kez basın.
 Fabrika Ayarlarına Sıfırlama : Tuşu ard arda 4 kez basın (Çizah sesi verinceye), ardından tekrar ses gelene kadar tuşu basılı tutun.
 Çizah yeni uygulamaya hesabına bağlayın
 Önce cihazı mevcut uygulamadan kaldırın, fabrika ayarlarına sıfırlayın ve tekrar eşleştirin.
 Durum Kontrolü : Tuşu ard arda iki kez basın. Çizah bip sesi verir çıkıncıdır, çizah açık durumdadır.

Micflip Wallet
Micflip Wallet bir akıllı ön kaybolma çantasıdır. Apple Find My ve Google Find Hub ile aynı anda çalışabilir. El çantası, dizüstü bilgisayar çantası ve diğer günlük taşıma eşyalarına yerleşebilir. Eşyaların konumunu istediğiniz zaman her yerde kontrol edebilirsiniz.

せつめいしょ

Micflip

Works with Apple Find My
Works with Android Find Hub

カード取り出しボタン
電源オン: 5秒間長押しし、確認音が鳴るまで電源オン: 5回連続で押し、音が鳴るまで初期化: 4回連続で押し、音が鳴るまで再度電源オン: 再度長押しして確認音が鳴るまで長押しを続ける。
デバイス新しいアプリアカウントに登録する
まず現在のアプリからデバイスを削除してください。初期化し、再度電源オンを待つてください。
デバイス新しいアカウントに接続する
デバイス新しいアカウントに接続する前に、現在のアプリからデバイスを削除してください。
初期化し、再度電源オンを待つてください。
状況を確認する
ボタンを2回連続で押すと、確認音が鳴ると同時にデバイスが起動し、製品が起動状態であることを示します。

Micflip Wallet
Micflip Walletは Apple (アプ) と Google Find Hub のシステムに対応した防衛防止スマート財布です。ハンドバッグやノート PC バッグなど様々なアイテムに収納でき、いつでもどこでも物品の位置を確認できます。

التعليمات

Micflip

Works with Apple Find My
Works with Android Find Hub

زر اخراج البطاقة
تشغيل الجهاز: اضغط على الزر لمدة 5 ثوانٍ حتى يصدر صوت التأكيد.
إيقاف التشغيل: اضغط على الزر 5 مرات متتالية حتى يصدر صوت التأكيد.
إعادة ضبط الجهاز: اضغط على الزر 4 مرات متتالية حتى يصدر صوت التأكيد، ثم اضغط على الزر باستمرار حتى يصدر صوت التأكيد مرة أخرى.
إعداد الجهاز لخدمة حساب أبل الجديد
قم أولاً بإزالة الجهاز من الحساب الحالي، ثم أعد تشغيل الجهاز، ثم أعد تشغيل الجهاز مع حساب أبل الجديد.
التحقق من حالة الجهاز: اضغط على الزر مرتين متتاليتين. عندما يصدر الجهاز صوتاً، فهذا يعني أنه قيد التشغيل.

Micflip Wallet
هذا محفظة ذكية مضادة للسرقة Micflip متوافقة مع النظامين Apple Find My و Google Find Hub. يمكن وضعها في حقائب اليد وحقائب الحاسوب وحقائب العمل وغيرها من الملحقات الشخصية لتتبع مواقع منتجاتك في وقت واحد.

iOS Find My

Power On/Long press the button for 5 seconds until the device emits a confirmation tone.
Power Off: Click the button 5 times consecutively until the device emits a confirmation tone.
Factory Reset: Click the button 4 times consecutively (the device will emit a tone), then long press until the device emits a tone again.
Bind device to a new app account
Confirm Status: Double-click the button. When the device beeps, it is powered on.

Find My
This Micflip Wallet is a smart app wallet supporting dual tracking channels: Apple Find My and Google Find Hub. It fits inside handbags, laptop bags and other daily carry items, enabling you to monitor your belongings location anytime, anywhere.

iOS Find My

Power On/Long press the button for 5 seconds until the device emits a confirmation tone.
Power Off: Click the button 5 times consecutively until the device emits a confirmation tone.
Factory Reset: Click the button 4 times consecutively (the device will emit a tone), then long press until the device emits a tone again.
Bind device to a new app account
Confirm Status: Double-click the button. When the device beeps, it is powered on.

Find My
Este billetera inteligente antirrobo Micflip es compatible con los dos sistemas Apple Find My y Google Find Hub. Se puede guardar en bolsos de mano, maletines para portátil y otros artículos personales para consultar la ubicación de sus pertenencias en cualquier momento y lugar.

iOS Find My

Power On/Long press the button for 5 seconds until the device emits a confirmation tone.
Power Off: Click the button 5 times consecutively until the device emits a confirmation tone.
Factory Reset: Click the button 4 times consecutively (the device will emit a tone), then long press until the device emits a tone again.
Bind device to a new app account
Confirm Status: Double-click the button. When the device beeps, it is powered on.

Find My
Die intelligente Verlorenheits-Geldbörse Micflip unterstützt zwei Kanäle: Apple Find My sowie Google Find Hub. Sie passt in Handtaschen, Laptoptaschen und weitere Minihandtaschen, damit Sie jederzeit und überall den Standort Ihrer Gegenstände abfragen können.

Find My sur iOS

Power On/Long press the button for 5 seconds until the device emits a confirmation tone.
Power Off: Click the button 5 times consecutively until the device emits a confirmation tone.
Factory Reset: Click the button 4 times consecutively (the device will emit a tone), then long press until the device emits a tone again.
Bind device to a new app account
Confirm Status: Double-click the button. When the device beeps, it is powered on.

Find My
Le portefeuille intelligent antivol Micflip fonctionne sur les deux réseaux Apple Find My et Google Find Hub. Se glisse dans sacs à main, sacs d'ordinateur portable et accessoires de quotidien pour localiser vos biens à tout moment, où que vous soyez.

IOS苹果查找

Power On/Long press the button for 5 seconds until the device emits a confirmation tone.
Power Off: Click the button 5 times consecutively until the device emits a confirmation tone.
Factory Reset: Click the button 4 times consecutively (the device will emit a tone), then long press until the device emits a tone again.
Bind device to a new app account
Confirm Status: Double-click the button. When the device beeps, it is powered on.

Find My
这款智能防丢钱包, 支持苹果Find My与安卓Find Hub双通道, 适合放在手提包、电脑包等随身物品中, 帮助您随时定位重要物品位置。

IOS Find My (OS Bul)

Power On/Long press the button for 5 seconds until the device emits a confirmation tone.
Power Off: Click the button 5 times consecutively until the device emits a confirmation tone.
Factory Reset: Click the button 4 times consecutively (the device will emit a tone), then long press until the device emits a tone again.
Bind device to a new app account
Confirm Status: Double-click the button. When the device beeps, it is powered on.

Find My
Micflip Wallet bir akıllı ön kaybolma çantasıdır. Apple Find My ve Google Find Hub ile aynı anda çalışabilir. El çantası, dizüstü bilgisayar çantası ve diğer günlük taşıma eşyalarına yerleşebilir. Eşyaların konumunu istediğiniz zaman her yerde kontrol edebilirsiniz.

IOS 探索, アプ

Power On/Long press the button for 5 seconds until the device emits a confirmation tone.
Power Off: Click the button 5 times consecutively until the device emits a confirmation tone.
Factory Reset: Click the button 4 times consecutively (the device will emit a tone), then long press until the device emits a tone again.
Bind device to a new app account
Confirm Status: Double-click the button. When the device beeps, it is powered on.

Find My
Micflip Walletは Apple (アプ) と Google Find Hub のシステムに対応した防衛防止スマート財布です。ハンドバッグやノート PC バッグなど様々なアイテムに収納でき、いつでもどこでも物品の位置を確認できます。

IOS 探索, アプ

Power On/Long press the button for 5 seconds until the device emits a confirmation tone.
Power Off: Click the button 5 times consecutively until the device emits a confirmation tone.
Factory Reset: Click the button 4 times consecutively (the device will emit a tone), then long press until the device emits a tone again.
Bind device to a new app account
Confirm Status: Double-click the button. When the device beeps, it is powered on.

Find My
Este billetera inteligente antirrobo Micflip es compatible con los dos sistemas Apple Find My y Google Find Hub. Se puede guardar en bolsos de mano, maletines para portátil y otros artículos personales para consultar la ubicación de sus pertenencias en cualquier momento y lugar.

مركز العثور عليها

Micflip

Power On/Long press the button for 5 seconds until the device emits a confirmation tone.
Power Off: Click the button 5 times consecutively until the device emits a confirmation tone.
Factory Reset: Click the button 4 times consecutively (the device will emit a tone), then long press until the device emits a tone again.
Bind device to a new app account
Confirm Status: Double-click the button. When the device beeps, it is powered on.

Find My
هذا محفظة ذكية مضادة للسرقة Micflip متوافقة مع النظامين Apple Find My و Google Find Hub. يمكن وضعها في حقائب اليد وحقائب الحاسوب وحقائب العمل وغيرها من الملحقات الشخصية لتتبع مواقع منتجاتك في وقت واحد.

Android Find Hub

Power On/Long press the button for 5 seconds until the device emits a confirmation tone.
Power Off: Click the button 5 times consecutively until the device emits a confirmation tone.
Factory Reset: Click the button 4 times consecutively (the device will emit a tone), then long press until the device emits a tone again.
Bind device to a new app account
Confirm Status: Double-click the button. When the device beeps, it is powered on.

Find Hub
This Micflip Wallet is a smart app wallet supporting dual tracking channels: Apple Find My and Google Find Hub. It fits inside handbags, laptop bags and other daily carry items, enabling you to monitor your belongings location anytime, anywhere.

Find Hub para Android

Power On/Long press the button for 5 seconds until the device emits a confirmation tone.
Power Off: Click the button 5 times consecutively until the device emits a confirmation tone.
Factory Reset: Click the button 4 times consecutively (the device will emit a tone), then long press until the device emits a tone again.
Bind device to a new app account
Confirm Status: Double-click the button. When the device beeps, it is powered on.

Find Hub
Este billetera inteligente antirrobo Micflip es compatible con los dos sistemas Apple Find My y Google Find Hub. Se puede guardar en bolsos de mano, maletines para portátil y otros artículos personales para consultar la ubicación de sus pertenencias en cualquier momento y lugar.

Android Find Hub

Power On/Long press the button for 5 seconds until the device emits a confirmation tone.
Power Off: Click the button 5 times consecutively until the device emits a confirmation tone.
Factory Reset: Click the button 4 times consecutively (the device will emit a tone), then long press until the device emits a tone again.
Bind device to a new app account
Confirm Status: Double-click the button. When the device beeps, it is powered on.

Find Hub
Die intelligente Verlorenheits-Geldbörse Micflip unterstützt zwei Kanäle: Apple Find My sowie Google Find Hub. Sie passt in Handtaschen, Laptoptaschen und weitere Minihandtaschen, damit Sie jederzeit und überall den Standort Ihrer Gegenstände abfragen können.

Android Find Hub

Power On/Long press the button for 5 seconds until the device emits a confirmation tone.
Power Off: Click the button 5 times consecutively until the device emits a confirmation tone.
Factory Reset: Click the button 4 times consecutively (the device will emit a tone), then long press until the device emits a tone again.
Bind device to a new app account
Confirm Status: Double-click the button. When the device beeps, it is powered on.

Find Hub
Le portefeuille intelligent antivol Micflip fonctionne sur les deux réseaux Apple Find My et Google Find Hub. Se glisse dans sacs à main, sacs d'ordinateur portable et accessoires de quotidien pour localiser vos biens à tout moment, où que vous soyez.

Android 查找中心

Power On/Long press the button for 5 seconds until the device emits a confirmation tone.
Power Off: Click the button 5 times consecutively until the device emits a confirmation tone.
Factory Reset: Click the button 4 times consecutively (the device will emit a tone), then long press until the device emits a tone again.
Bind device to a new app account
Confirm Status: Double-click the button. When the device beeps, it is powered on.

Find Hub
这款智能防丢钱包, 支持苹果Find My与安卓Find Hub双通道, 适合放在手提包、电脑包等随身物品中, 帮助您随时定位重要物品位置。

Android 查找中心

Power On/Long press the button for 5 seconds until the device emits a confirmation tone.
Power Off: Click the button 5 times consecutively until the device emits a confirmation tone.
Factory Reset: Click the button 4 times consecutively (the device will emit a tone), then long press until the device emits a tone again.
Bind device to a new app account
Confirm Status: Double-click the button. When the device beeps, it is powered on.

Find Hub
Micflip Wallet bir akıllı ön kaybolma çantasıdır. Apple Find My ve Google Find Hub ile aynı anda çalışabilir. El çantası, dizüstü bilgisayar çantası ve diğer günlük taşıma eşyalarına yerleşebilir. Eşyaların konumunu istediğiniz zaman her yerde kontrol edebilirsiniz.

Android 查找中心

Power On/Long press the button for 5 seconds until the device emits a confirmation tone.
Power Off: Click the button 5 times consecutively until the device emits a confirmation tone.
Factory Reset: Click the button 4 times consecutively (the device will emit a tone), then long press until the device emits a tone again.
Bind device to a new app account
Confirm Status: Double-click the button. When the device beeps, it is powered on.

Find Hub
Este billetera inteligente antirrobo Micflip es compatible con los dos sistemas Apple Find My y Google Find Hub. Se puede guardar en bolsos de mano, maletines para portátil y otros artículos personales para consultar la ubicación de sus pertenencias en cualquier momento y lugar.

Android 查找中心

Power On/Long press the button for 5 seconds until the device emits a confirmation tone.
Power Off: Click the button 5 times consecutively until the device emits a confirmation tone.
Factory Reset: Click the button 4 times consecutively (the device will emit a tone), then long press until the device emits a tone again.
Bind device to a new app account
Confirm Status: Double-click the button. When the device beeps, it is powered on.

Find Hub
هذا محفظة ذكية مضادة للسرقة Micflip متوافقة مع النظامين Apple Find My و Google Find Hub. يمكن وضعها في حقائب اليد وحقائب الحاسوب وحقائب العمل وغيرها من الملحقات الشخصية لتتبع مواقع منتجاتك في وقت واحد.

Android 查找中心

Power On/Long press the button for 5 seconds until the device emits a confirmation tone.
Power Off: Click the button 5 times consecutively until the device emits a confirmation tone.
Factory Reset: Click the button 4 times consecutively (the device will emit a tone), then long press until the device emits a tone again.
Bind device to a new app account
Confirm Status: Double-click the button. When the device beeps, it is powered on.

Find Hub
Die intelligente Verlorenheits-Geldbörse Micflip unterstützt zwei Kanäle: Apple Find My sowie Google Find Hub. Sie passt in Handtaschen, Laptoptaschen und weitere Minihandtaschen, damit Sie jederzeit und überall den Standort Ihrer Gegenstände abfragen können.

Charging Instructions - Pogo Pin Charging

Align the matching charging cable with the charging contacts.
Please align the matching charging cable with the charging contacts. You will hear a beep when attached successfully. Clearly red light means charging, green light means fully charged.

Charging Instructions - Wireless Charging

Align the wireless charging mark of the device with the wireless charger, and green light means fully charged. Please ensure the device is centered on the wireless charger.

Instrucciones de carga - Carga por Pogo Pin

Align the matching charging cable with the charging contacts.
Please align the matching charging cable with the charging contacts. You will hear a beep when attached successfully. Clearly red light means charging, green light means fully charged.

Instrucciones de carga - Carga inalámbrica

Align the wireless charging mark of the device with the wireless charger, and green light means fully charged. Please ensure the device is centered on the wireless charger.

Ladeanweisungen - Pogo-Pin-Laden

Align the matching charging cable with the charging contacts.
Please align the matching charging cable with the charging contacts. You will hear a beep when attached successfully. Clearly red light means charging, green light means fully charged.

Ladeanweisungen - Kabelloses Laden

Align the wireless charging mark of the device with the wireless charger, and green light means fully charged. Please ensure the device is centered on the wireless charger.

Instructions de charge - Charge par broche Pogo

Align the matching charging cable with the charging contacts.
Please align the matching charging cable with the charging contacts. You will hear a beep when attached successfully. Clearly red light means charging, green light means fully charged.

Instructions de charge - Charge sans fil

Align the wireless charging mark of the device with the wireless charger, and green light means fully charged. Please ensure the device is centered on the wireless charger.

充电说明-Pogo Pin充电

Align the matching charging cable with the charging contacts.
Please align the matching charging cable with the charging contacts. You will hear a beep when attached successfully. Clearly red light means charging, green light means fully charged.

充电说明-无线充电

Align the wireless charging mark of the device with the wireless charger, and green light means fully charged. Please ensure the device is centered on the wireless charger.

Şarj Talimatları - Pogo Pin ile Şarj Etme

Align the matching charging cable with the charging contacts.
Please align the matching charging cable with the charging contacts. You will hear a beep when attached successfully. Clearly red light means charging, green light means fully charged.

Şarj Talimatları - Kablosuz Şarj

Align the wireless charging mark of the device with the wireless charger, and green light means fully charged. Please ensure the device is centered on the wireless charger.

充電說明- Pogo Pin 充電

Align the matching charging cable with the charging contacts.
Please align the matching charging cable with the charging contacts. You will hear a beep when attached successfully. Clearly red light means charging, green light means fully charged.

充電說明- 無線充電

Align the wireless charging mark of the device with the wireless charger, and green light means fully charged. Please ensure the device is centered on the wireless charger.

Şarj Talimatları - Pogo Pin ile Şarj Etme

Align the matching charging cable with the charging contacts.
Please align the matching charging cable with the charging contacts. You will hear a beep when attached successfully. Clearly red light means charging, green light means fully charged.

Şarj Talimatları - Kablosuz Şarj

Align the wireless charging mark of the device with the wireless charger, and green light means fully charged. Please ensure the device is centered on the wireless charger.

充電說明- Pogo Pin 充電

Align the matching charging cable with the charging contacts.
Please align the matching charging cable with the charging contacts. You will hear a beep when attached successfully. Clearly red light means charging, green light means fully charged.

充電說明- 無線充電

Align the wireless charging mark of the device with the wireless charger, and green light means fully charged. Please ensure the device is centered on the wireless charger.

Specification Parameter

Name: Tofold Smart Wallet
Model: P15
Material: Genuine Leather + Aluminum Alloy
Battery Capacity: 220mAh
Size: 101x71x21mm
Operating Temperature: -10°C~60°C
Standby Time: 1 Year
Pogo Pin Charging: 5V/0.3A
Wireless charging: 5V/0.4A

Parámetros técnicos

Nombre: Cartera inteligente triple plegue
Modelo: P15
Material: Cuero auténtico + Aleación de aluminio
Capacidad de batería: 220mAh
Dimensiones: 101*71*21mm
Temperatura de funcionamiento: -10°C~60°C
Tiempo en espera: 1 año
Carga Pogo Pin: 5V/0.3A
Carga inalámbrica: 5V/0.4A

Technische Spezifikationen

Name: Dreifach gefaltete Smart-Geldbörse
Modell: P15
Material: Echtes Leder + Aluminiumlegierung
Akkukapazität: 220mAh
Maße: 101x71x21mm
Betriebsstemperatur: -10°C~60°C
Standby-Zeit: 1 Jahr
Pogo-Pin-Ladung: 5V/0.3A
Drahtlose Ladung: 5V/0.4A

Specifications Techniques

Name: Portefeuille intelligent triple pli
Modèle: P15
Matériau: Cuir véritable + Alliage d'aluminium
Capacité de batterie: 220mAh
Dimensions: 101*71*21mm
Température d'utilisation: -10°C~60°C
Durée de veille: 1 an
Charge Pogo Pin: 5V/0.3A
Charge sans fil: 5V/0.4A

常規問題

1. Find Hub/Apple Hub/Android Hub...
2. 如何連接...
3. 如何充電...
4. 如何重置...
5. 如何綁定...
6. 如何連接...
7. 如何充電...
8. 如何重置...
9. 如何綁定...

常見問題

1. Find Hub/Apple Hub/Android Hub...
2. 如何連接...
3. 如何充電...
4. 如何重置...
5. 如何綁定...
6. 如何連接...
7. 如何充電...
8. 如何重置...
9. 如何綁定...

规格参数

名称: 三折智能钱包
型号: P15
材质: 真皮+铝合金
电池容量: 220mAh
尺寸: 101x71x21mm
使用温度: -10°C~60°C
待机时长: 1年
Pogo Pin充电: 5V/0.3A
无线充电: 5V/0.4A

المواصفات الفنية

اسم المنتج: محفظة ذكية ثلاثية الطي
النموذج: P15
المادة: جلد أصلي + سبيكة ألومنيوم
سعة البطارية: 220mAh
الحجم: 101*71*21mm
درجة حرارة التشغيل: -10°C~60°C
وقت التوقف: 1 سنة
شحن Pogo Pin: 5V/0.3A
شحن لاسلكي: 5V/0.4A

المواصفات الفنية

اسم المنتج: محفظة ذكية ثلاثية الطي
النموذج: P15
المادة: جلد أصلي + سبيكة ألومنيوم
سعة البطارية: 220mAh
الحجم: 101*71*21mm
درجة حرارة التشغيل: -10°C~60°C
وقت التوقف: 1 سنة
شحن Pogo Pin: 5V/0.3A
شحن لاسلكي: 5V/0.4A

Compatible devices

Applicable to Apple devices with iOS 18.0 or above:
iOS Apple Find My: Apple Find My app-Bottom>Select the device to be added to Remove
Remove Found My: Apple Find My app-Bottom>Select the device to be added to Remove
Remove Found My: Apple Find My app-Bottom>Select the device to be added to Remove

Compatible devices

Applicable to Apple devices with iOS 18.0 or above:
iOS Apple Find My: Apple Find My app-Bottom>Select the device to be added to Remove
Remove Found My: Apple Find My app-Bottom>Select the device to be added to Remove
Remove Found My: Apple Find My app-Bottom>Select the device to be added to Remove

Compatible devices

Applicable to Apple devices with iOS 18.0 or above:
iOS Apple Find My: Apple Find My app-Bottom>Select the device to be added to Remove
Remove Found My: Apple Find My app-Bottom>Select the device to be added to Remove
Remove Found My: Apple Find My app-Bottom>Select the device to be added to Remove

Compatible devices

Applicable to Apple devices with iOS 18.0 or above:
iOS Apple Find My: Apple Find My app-Bottom>Select the device to be added to Remove
Remove Found My: Apple Find My app-Bottom>Select the device to be added to Remove
Remove Found My: Apple Find My app-Bottom>Select the device to be added to Remove

Compatible devices

Applicable to Apple devices with iOS 18.0 or above:
iOS Apple Find My: Apple Find My app-Bottom>Select the device to be added to Remove
Remove Found My: Apple Find My app-Bottom>Select the device to be added to Remove
Remove Found My: Apple Find My app-Bottom>Select the device to be added to Remove

Compatible devices

Applicable to Apple devices with iOS 18.0 or above:
iOS Apple Find My: Apple Find My app-Bottom>Select the device to be added to Remove
Remove Found My: Apple Find My app-Bottom>Select the device to be added to Remove
Remove Found My: Apple Find My app-Bottom>Select the device to be added to Remove

Compatible devices

Applicable to Apple devices with iOS 18.0 or above:
iOS Apple Find My: Apple Find My app-Bottom>Select the device to be added to Remove
Remove Found My: Apple Find My app-Bottom>Select the device to be added to Remove
Remove Found My: Apple Find My app-Bottom>Select the device to be added to Remove

Compatible devices

Applicable to Apple devices with iOS 18.0 or above:
iOS Apple Find My: Apple Find My app-Bottom>Select the device to be added to Remove
Remove Found My: Apple Find My app-Bottom>Select the device to be added to Remove
Remove Found My: Apple Find My app-Bottom>Select the device to be added to Remove

Compatible devices

Applicable to Apple devices with iOS 18.0 or above:
iOS Apple Find My: Apple Find My app-Bottom>Select the device to be added to Remove
Remove Found My: Apple Find My app-Bottom>Select the device to be added to Remove
Remove Found My: Apple Find My app-Bottom>Select the device to be added to Remove