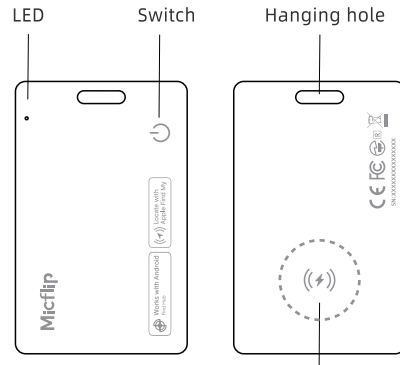
 
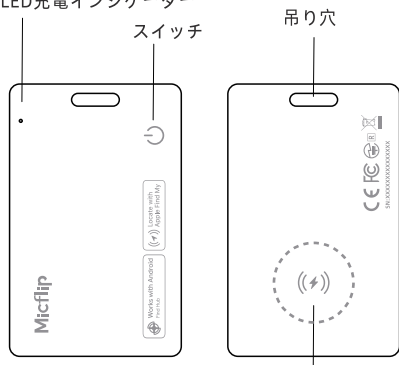


材质：100克铜版纸 双面印刷

 

 
折叠尺寸：61×100mm

展开尺寸：732×100mm

正面

Works with Apple Find My Works with Android Find Hub Manual/取扱説明書/ 使用说明书 P10-5 Anti-Loss Smart Card スマート紛失防止カード 智能防丢卡  http://help-p105.micflip.com	EN Micflip Product Introduction  LED Switch Hanging hole Wireless charging Micflip Card is an ultra-thin smart anti-loss card that Compatible with both Apple Find My and Android Find Hub Device. It is designed to fit in wallets, keys, passport holders, laptop bags, and other essentials, helping you locate your items anytime, anywhere.	EN Instructions for Use 1. Power on Press and hold until you hear a beep. 2. Power off Press 5 times continuously until you hear a beep. 3. Reset Press 4 times continuously until you hear a beep, then keep holding until you hear another beep. 4. Status Confirmation Double-click twice to emit a beep, indicating the device is powered on. Conversely, it is powered off. 5. Serial Number Query Press the button 6 times consecutively within 2 seconds to emit a beep, placing the device into serial number reading mode. 6. Re bind the item to a new app account Please first remove the current item from your app account, then restore it to factory settings, and then the item can be bound to a new app account	EN Works with Apple Find My Enable Anti- Loss Function A. Locate by Beeping 1. Open the Find My App from Apple. 2. Tap the smart card icon which you have set up. 3. Tap the Play Sound Icon . 4. The device will beeps if it is within bluetooth range. B. Locate by Map directions 1. Open the Find My App from Apple. 2. Tap the smart card icon which been setted up . 3. Tap the Directions Icon . 4. The Maps app will navigate to the last seen location of your card. C. Share Item location with a close contact 1. Tap the Add person icon from Share Item. 2. Tap Continue to accept the on-screen information. 3. Share the location link to close contact from your Contacts. 4. The Link will remain valid within the “Set the number of days” .	EN D. Share Item location with a Trusted person or Entity 1. Tap the Share Item Location icon from Lost Item. 2. Press Continue to accept the on screen information. 3. Share the location link to trusted person or entity. 4. The link will remain valid within the “Set the number of days” . E. Share contact information with finder 1. Select the Item needs to be disable the anti-loss function from the Find My App. 2. Enter your phone number and an initial message to the person who finds the item (Finder). 3. The finder can view your contact information via the Identify Found Item function from the Find My app. Disable Anti- Loss Function 1. Select the Item needs to be disable the anti-loss function from the Find My App. 2. Scroll to bottom and press Remove Item. 3. Press Remove if you are agreed to the information on the screen.	EN Product Features 1.Super slim 1.7MM 2.Supports wireless charging and can be recharged and recycled 3.Extremely low power consumption,6 months standby 4.Supports Apple Find My + Google Find Hub anti-loss and location tracking platforms Specification Parameter Name: Anti-Loss Smart Card Model: P10 Function: Find My + Find Hub Anti-Loss Positioning Material: PVC Wireless charging input: 5V 0.8A(Max) Battery capacity: 155mAh Size: 54x85.5x1.7mm Operating temperature: -10~60°C Compatible devices: Applicable to Apple devices with iOS 18.0 or above; Google devices with Android 12.0 or above.	EN Charging instructions  Please align the wireless charging indicator area of the device with the wireless charger. A “beep” sound will be heard, and a red light will stay on to indicate that charging is in progress. When charging is complete, a green indicator light will turn on, please remove the device promptly. It is recommended to charge for 2 hours for first use. Note 1. If the charging indicator light does not turn on normally, please try waiting for a moment before operating again and realign the device with the charging area. 2. Use only wireless chargers that meet quality and safety standards. Non-compliant chargers may damage the product. Micflip-brand wireless chargers are recommended.	EN About Find Hub 1. Why doesn't the Fast Pair popup appear on my phone to add the device? Try below steps to add device manually to your Find Hub app. 1. Make sure that your phone has Bluetooth and Location turned on. 2. Verify that your phone is connected to a Wi-Fi or mobile network. 3. Make sure your phone is with in 0.5 meters (1.5feet) of the device. 4. Navigate to Settings>Google>Device Sharing>Devices>check Scan for nearby Device is ON. Note: - If the device is powered on but Google Find Hub cannot detect it, restore the device to factory settings. If it still cannot be found, restart your phone to locate the device. - If you dismiss the Fast Pair pop up twice or frequently pair and unpair a tag, you might trigger the banning logic, which prevents unnecessary Fast Pair pop ups. To resolve this, you can either wait for five minutes for the Fast Pair pop up to be re-enabled or reboot your phone. Some of these steps are applicable only on Android 12.0 and above. - Android and Google Play are trademarks of Google LLC.	EN FAQ: 1. How do I confirm if the device is powered on? Double-click the device button. If the device makes a sound, it's working. If it doesn't respond, it's powered off. Press and hold the button for 5 seconds to power it on. 2. How is the device designed to discourage unwanted tracking? If any Find Hub network accessory separated from its owner is seen moving with you over time, you'll receive unknown tracker alert on your phone which tells you how to find it, disable it and what to do next.	JA 製品紹介 LED充電インジケータースイッチ吊り穴  無線充電エリア Micflip チェックカードは、超薄型スマート紛失防止カードで、Apple の Find My と Android の Find Hub の両チャネルに対応しています。 財布、鍵、パスポートホルダー、コンピューターバッグなどの身の回り品に入れるのに適しており、いつでもどこでもアイテムの位置を把握できるような手伝います。	JA 使用説明 1. 電源オン 長押しして提示音が鳴るまで待ちます。 2. 電源オフ 5回連続で押しして提示音が鳴るまで待ちます。 3. 出荷時設定への復元 4回連続で押しして音が鳴った後、引き続き長押しして再度提示音が鳴るまで待ちます。 4. 状態確認 2回タプルックして提示音が鳴れば機器は電源オン状態。そうでなければ電源オフ状態です。 5. シリアル番号の確認 2秒以内に6回連続でキーを押して提示音が鳴ると、機器はシリアル番号の読み取り状態に入ります。 6. 物品を新しいAppアカウントに再登録 まずAppアカウントで現在の物品の登録を解除し、次に出荷時設定に復元した後、物品を新しいAppアカウントに登録できます。	JA 紛失防止モードの有効化 A. 音で位置特定 1. アップル製品デバイスの「探す」アプリを開く； 2. 設定済みの紛失防止カードアイコンをタップ； 3. 「音を再生」をタップ； 4. ブルートゥース範囲内で提示音が鳴る。 B. 地図ナビで位置特定 1. アップル製品デバイスの「探す」アプリを開く； 2. 設定済みの紛失防止カードアイコンをタップ； 3. 「ルート」をタップ； 4. 「地図」が最後の確認位置までナビゲート。 C. 親密な連絡先と位置共有 1. 「物品を共有」で「人員を追加」をタップ； 2. 「続行」で画面情報を受け入れ； 3. 連絡先から親友と位置リンクを共有； 4. リンクは「設定回数」内有効。 D. 信頼者と位置共有 1. 「紛失物品」で「位置共有」をタップ； 2. 「続行」で画面情報を受け入れ； 3. サードパーティと位置リンクを共有； 4. リンクは「設定回数」内有効。
---	--	---	--	--	--	--	---	---	--	---	---

反面

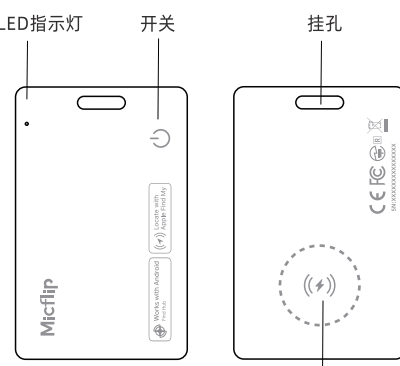JA E. 拾得者と連絡情報共有 1. 「紛失物品」画面で「連絡先情報表示」アイコンをタップ； 2. 携帯番号を入力し、拾得者へ初期メッセージを記入； 3. 拾得者は「探す」アプリの「物品発見確認」機能で連絡先情報を確認可； 4. ブルートゥース範囲内なら提示音が鳴る。 物品の削除 1. 「探す」アプリで紛失防止機能を無効にする物品を選択； 2. 画面下部までスワイプし「物品を削除」をタップ； 3. 画面の確認メッセージに同意すれば「削除」をタップ。	JA 製品特長 1. 超薄1.7MM 2. ワイヤレス充電対応、リユース可能 3. 超低消費電力、満充電で待機時間半年 4. Apple Find My + Google Find Hub の防走失位置情報プラットフォームに対応 仕様パラメータ 名称：スマート紛失防止カード 型番：P10 機能：Find My + Find Hub 防走失位置情報 材質：PVC 電池容量：155mAh 入力：5V 0.8A (Max) サイズ：54x85.5x1.7mm 使用温度：-10~60°C 適用機器：AppleデバイスiOS 18.0以上システム；GoogleデバイスAndroid 12.0以上システムに対応。	JA 充電説明  機器のワイヤレス充電識別エリアをワイヤレス充電器に正対させてください。「ビー」という音が鳴り、同時に赤いランプが常時点灯すれば充電中です。充電完了後は緑色のインジケータが点灯するので、速やかに機器を取り外してください。 初回使用時は2時間充電することをおすすめします。 注意 1. 充電インジケータが正常に点灯しない場合は、しばらく待ってから操作し直し、充電エリアに再度正対させてください。 2. 品質安全基準に適合したワイヤレス充電器を使用してください。品質安全基準に適合しないワイヤレス充電器は本製品を損傷させる可能性が非常に高いため、Micflipブランドのワイヤレス充電器の使用を推奨します。	JA Find Hubについて 1.なぜ端末に「クイックペアリング」のポップアップウィンドウが表示されず、デバイスを追加できないのですか？ 下記の手順でデバイスをFind Hubアプリに手動で追加してみてください。 1. 端末のBluetoothと位置情報機能が有効になっていることを確認します。 2. 端末がWi-Fiまたはモバイルネットワークに接続されていることを確認します。 3. 端末とデバイスの距離が0.5メートル（1.6フィート）以内であることを確認します。 4. 「設定」>「Google」>「デバイスと共有」>「デバイス」に進み、「近くのデバイスをスキャン」がオンになっているか確認します。 注意： 「クイックペアリング」のポップアップウィンドウを2回閉じた場合、または頻繁にペアリングとペアリング解除を行った場合、不要な「クイックペアリング」ポップアップウィンドウを防止するための無効化ロジックが発動する可能性があります。この問題を解決するには、5分待って「クイックペアリング」ポップアップウィンドウを再び有効にするか、端末を再起動してください。一部の手順はAndroid 12.0以上のバージョンにのみ適用されます。	JA よくある質問： 1. 機器が起動しているかどうかの確認方法？ 機器のボタンをダブルタップ、音が鳴れば動作中、無反応なら電源オフ。同ボタンを5秒長押しで起動。 2. 不要な追跡を防止するように機器はどう設計されている？ Find Hubネットワークアクセサリが所有者から離れ、長時間移動し続けると、スマホに「未知の追跡者」警報が表示。警報で見つけた、無効化方法、次の手順が案内される。	EN 产品介绍 LED指示灯 开关 挂孔  无线充电区域 Micflip 查找卡是一款超薄智能防丢卡，支持苹果Find My与安卓Find Hub双通道。 适合放置于钱包、钥匙、护照夹、电脑包等随身物品中，帮助您随时随地掌握物品位置。	EN 使用说明 1. 开机 长按直至发出提示音。 2. 关机 连接5下直至发出提示音。 3. 恢复出厂设置 长按4下发出声响再继续长按直至再次发出提示音。 4. 状态确认 双击2下发出提示音说明设备已开机，反之关机。 5. 查询序列号 2秒内连续按键6次发出提示音，设备进入序列号读取状态。 6. 物品重新绑定到新的App帐户 请先在App帐户上解除当前物品，再恢复出厂设置，然后物品就可以绑定到新的App帐户。	EN 开启防丢模式 Works with Apple Find My A. 通过声响定位 1. 从苹果设备打开“查找”应用； 2. 点击您已设置好的智能防丢卡图标； 3. 点击“播放声音”图标； 4. 如果设备在蓝牙范围内，它会发出提示声。 B. 通过地图导航定位 1. 从苹果设备打开“查找”应用； 2. 点击已设置好的智能防丢卡图标； 3. 点击“路线”图标； 4. “地图”应用会导航到您的智能防丢卡最后被看到的位置。 C. 与亲密联系人共享物品位置 1. 在“共享物品”中点击“添加人员”图标； 2. 点击“继续”以接受屏幕上的信息； 3. 从您的通讯录中，将位置链接分享给亲友共享物品位置； 4. 该链接将在“设置天数”内有效。 D. 与可信的人或机构共享物品位置 1. 在“遗失物品”中点击“共享物品位置”图标； 2. 点击“继续”以接受屏幕上的信息； 3. 将位置链接分享给提供协助的第三方共享物品位置； 4. 该链接将在“设置天数”内有效。	EN E. 与拾得者共享联系信息 1. 在“丢失物品”界面中，点击“显示联系人信息”图标； 2. 输入您的手机号码，并为捡到物品的人（拾获者）填写一条初始留言； 3. 拾获者可通过“查找”应用中的“确认已找到物品”功能，查看您的联系人信息； 4. 如果设备在蓝牙范围内，它会发出提示声。 移除物品 1. 在“查找”应用中，选择需要关闭防丢功能的物品； 2. 滑动至页面底部，点击“移除物品”； 3. 若您确认屏幕上的提示信息，点击“移除”。 常见问题： 1. 如何确认设备是否已开机？ 双击设备按键。若设备发出声响，说明设备处于工作状态；若设备无响应，则处于关机状态。长按该按键5秒即可开机。 2. 该设备是如何设计来阻止不必要的追踪的？ 如果任何 Find Hub 网络配件与其主人分离，并被发现长时间跟随您移动，您的手机上会收到未知追踪器警报，该警报会告诉您如何找到它、禁用它以及下一步该怎么做。	EN 充电说明  请将设备的无线充电标识区域对准无线充电器，会发出嘀的一声，同时红灯长亮表示充电中，充电完成后会亮起绿色指示灯，请及时取下设备。 首次使用建议充电2小时。 注意 1. 充电指示灯未正常亮起时请尝试等待一会儿再操作，并重新对准充电区域； 2. 请使用符合国家安全标准的无线充电器，不符合质量安全标准的无线充电器很有可能损坏本产品，推荐使用Micflip品牌无线充电器。	EN 产品特点 1.超薄1.7MM 2.支持无线充电，可循环使用 3.极低功耗，充满电待机时间半年 4.支持苹果Find My+谷歌Find Hub防丢定位平台 规格参数 名称：智能防丢卡 型号：P10 功能：Find My + Find Hub防丢定位 材质：PVC 无线充电输入：5V 0.8A (Max) 电池容量：155mAh 尺寸：54x85.5x1.7mm 使用温度：-10~60°C 适配设备：适用于苹果设备iOS 18.0系统以上设备；谷歌设备Android 12.0系统以上设备。	EN 关于 Find Hub 1. Find Hub部份国家不可用，仅支持海外原生安卓11及以上系统。 2.为什么我的手机上没有出现“快速配对”弹出窗口来添加设备？ 请尝试以下步骤将设备手动添加到您的 Find Hub 应用。 1. 确保您的手机已开启蓝牙和定位功能。 2. 确保您的手机已连接到 Wi-Fi 或移动网络。 3. 确保您的手机与设备之间的距离在 0.5 米（1.6 英尺）以内。 4.前往“设置”>“Google”>“设备和共享”>“设备”，检查“扫描附近设备”是否已开启。 注意： 如果您两次关闭“快速配对”弹出窗口，或频繁配对和取消配对标签，可能会触发禁用逻辑，以防止不必要的“快速配对”弹出窗口。要解决此问题，您可以等待五分钟让“快速配对”弹出窗口重新启用，或者重新启动手机。部分步骤仅适用于Android 12.0 及更高版本。
---	--	--	---	--	--	--	---	---	--	---	--